


# ODS Specialist in Milieu-Instrumentatie




## Fast Sample Loop Schematics - Sampling without the use of a particle filter

“We grind it, speed it up, homogenise it, mix it, extract it, stir it and then simply burn it ... that’s how we do it”.

### Anti-isokinetic sampling from waste water out of a process pipe

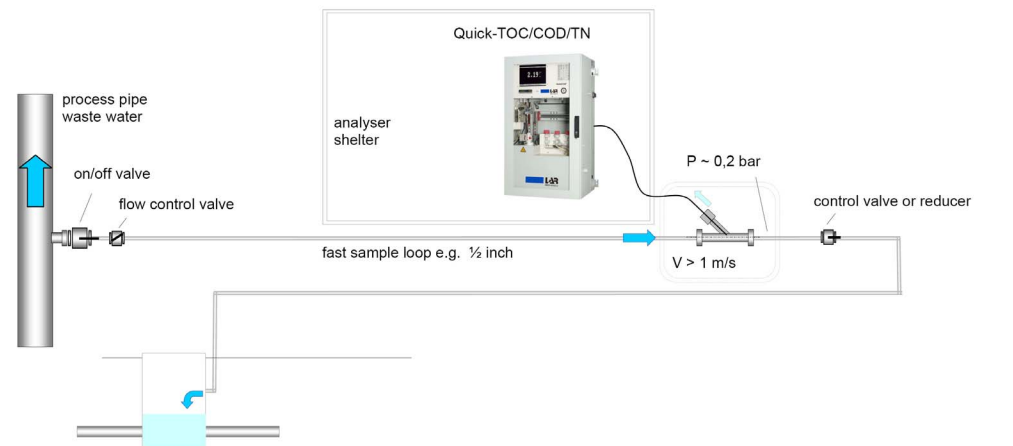

### Anti-isokinetic sampling of waste water out of a sewer by use of a submersible pump

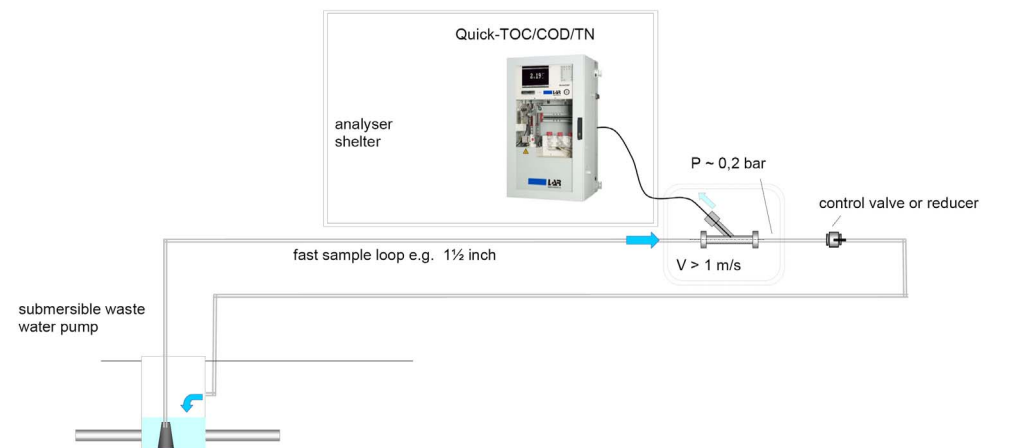

### Anti-isokinetic sampling of waste water out of a partly filled process pipe by use of a peristaltic pump

