


Custom extended sensor lengths

*“ We are prepared to solve your most difficult and unusual applications.”
FCI is dedicated to the design and manufacture of unique customer requirements.*

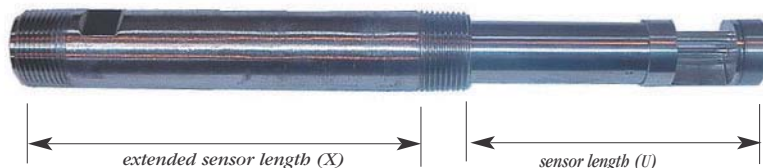

Description

Custom extended sensor lengths offer the necessary installation safety and protection for high temperature applications or piping with thick insulation.

The extended sensor assembly “X” length provides the additional distance necessary to safely separate the transmitter electronics and enclosure from the process piping.

Applications

- › Piping and ducting with thick insulation
- › High temperature applications

FCI Model Availability

- › FLT93 FlexSwitch Series for flow, level and temperature
- › NuTec Series flow and level switches
- › ST98 FlexMASter Series mass flowmeters
- › GF Series gas mass flowmeters

How To Order

Please contact your local FCI Sales Representative to configure the part number using the following OIS information:

- › For FLT93 Series, select a “W” in Box 7 and enter;
“ ____U inch insertion length, ____X inch extended length”
- › For NuTec Series, select a “W” in Box 3 and enter;
“ ____U inch insertion length, ____X inch extended length”
- › For ST98 Series, select a “W” in Box 6 and enter;
“ ____U inch insertion length, ____X inch extended length”
- › For GF Series, Contact FCI

Other FCI proven custom product solutions include, but are not limited to:

- › Self-cleaning sensors
- › Rain and moisture sensor shields
- › Quick disconnect sensors
- › Sensor coatings for corrosive processes
- › Custom extended sensor lengths
- › Custom process connections
- › Self-calibrating flowmeters
- › Sun and wind enclosure shades
- › Instrument programming/communications setup
- › Flow conditioning and extreme process evaluations

Your local FCI Sales Representative is:



Web: www.fluidcomponents.com Email: info@fluidcomponents.com
1755 La Costa Meadows Dr. San Marcos CA 92069 USA Phone: 760-744-6950 Toll free: 800.854.1993 Fax: 760.736.6250
European Office: Persephonstraat 3-01, 5047 TT Tulburg, The Netherlands Phone: 31.13.5159989 Fax: 31-13-5799036
FCI is ISO 9001 certified/conformance to AS9000